


WHERE ONE ENGINE IS REQUIRED TO CHARGE TWO SETS OF BATTERIES A SLIT CHARGE RELAY SHOULD BE WIRED IN AS SHOWN.

29M65

ENGINE WIRING DIGRAM - EARTH RETURN 9P-1017-3
 (Optional cold start kit is also shown
 Cables are marked as -----)

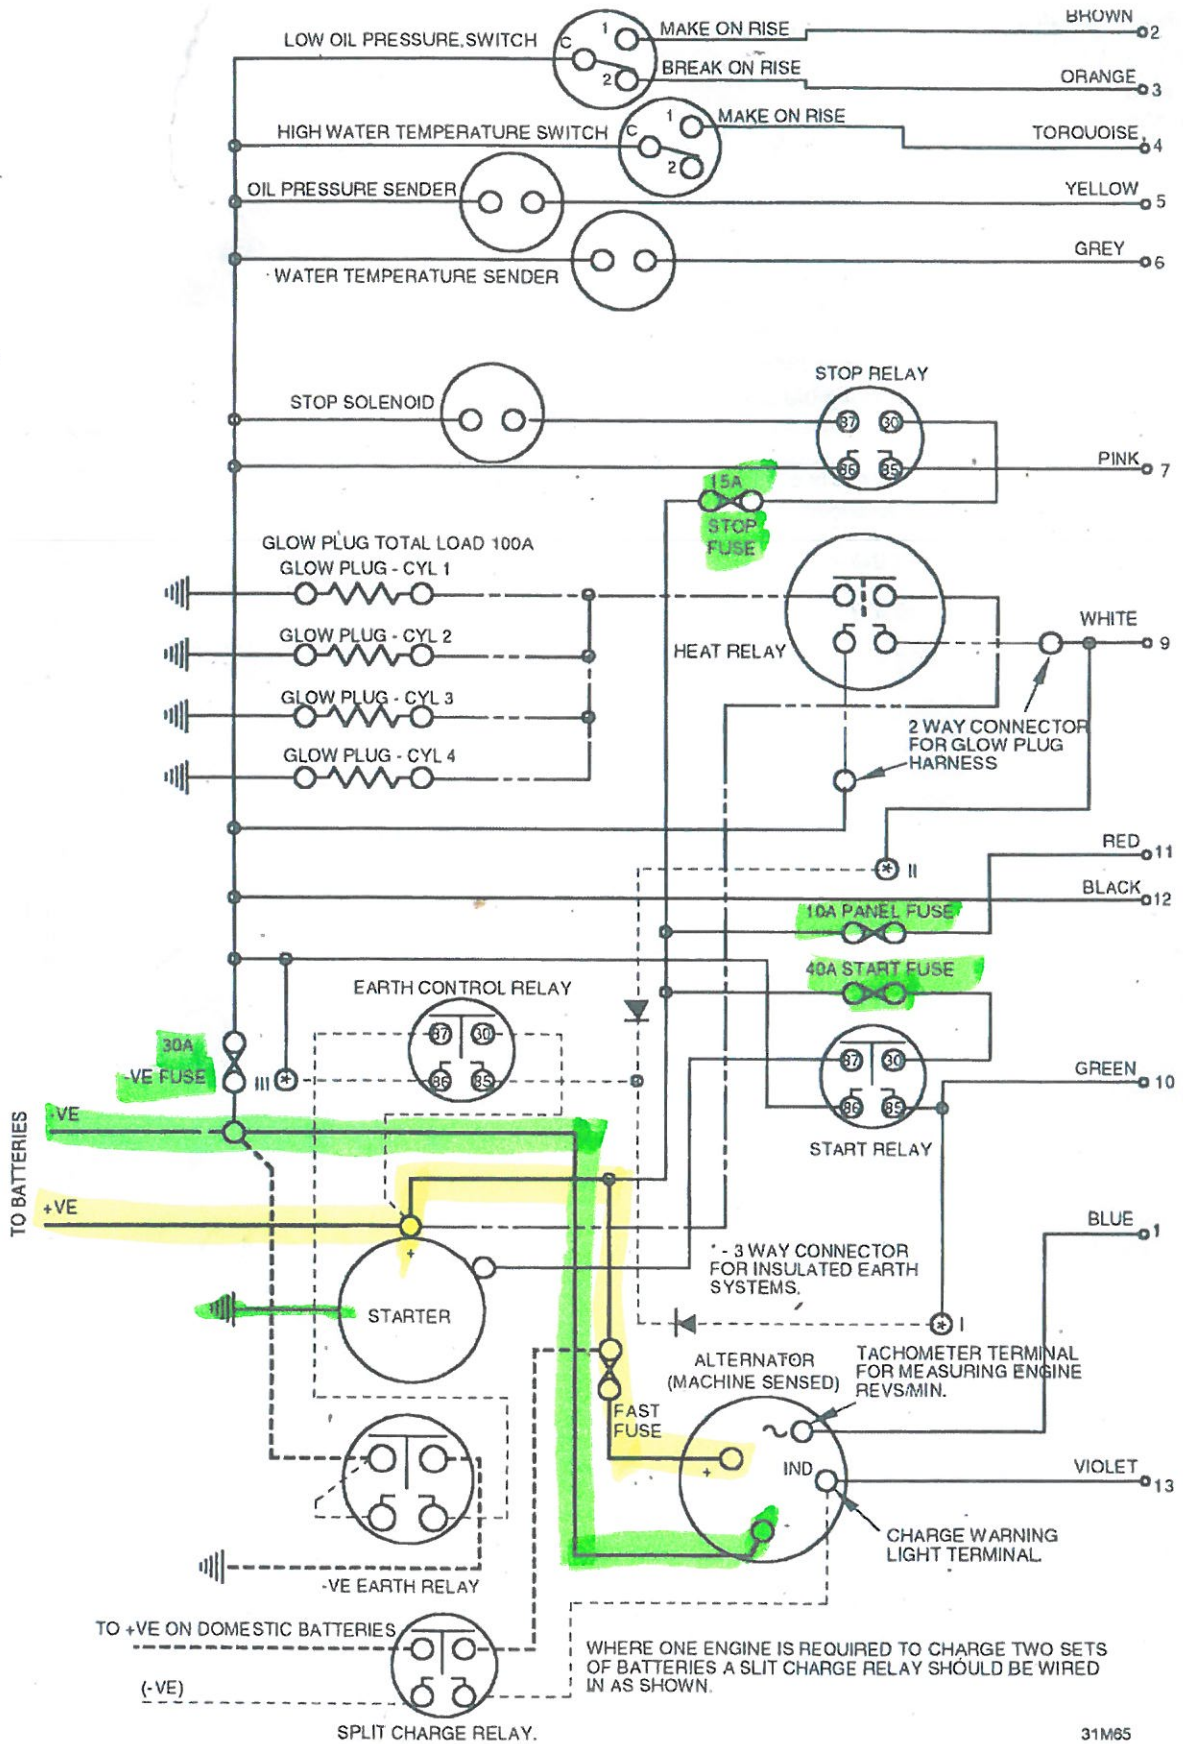

ENGINE WIRING DIAGRAM - INSULATED RETURN 98-1022-3
 (Optional cold start kit is also shown
 Cables are marked as ———)

31M65